

WeatherTech®

Tailgate TechLiner® Installation Instructions

Thank you for purchasing your WeatherTech® Tailgate TechLiner®. The Tailgate TechLiner® will offer incredible, affordable protection and years of reliable use if you follow these simple instructions.

Tools Needed



1/4" Drive Socket Set


Hardware



Parts Kit #88TG07
(1) T-15 Torx Insert Bit
(12) Plastic Washers
Also In Box
(1) Rolled Extrusion


⚠ WARNING ⚠

It is imperative to adhere the Tailgate TechLiner® to the tailgate of the truck. Failure to do so may allow the Tailgate TechLiner® to lift during travel as a result of turbulent airflow. This could cause unsafe conditions for the operator of the vehicle or other vehicles nearby.

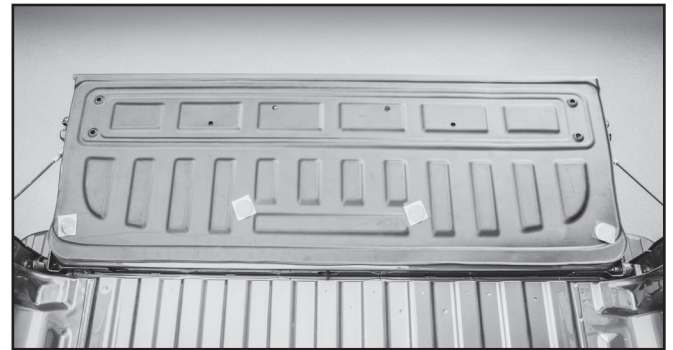

1 Lower the tailgate and remove all tailgate accessories prior to installation. Clean your truck bed and tailgate with TechCare™ Gentle Car™ Shampoo or soap and water. Dry thoroughly before installing the Tailgate TechLiner®.

2 Place Tailgate TechLiner® on a dry flat surface. Unfold and lay out to flatten the liner. For best results, lay liner in the sun and put a small weight on each of the corners. Locate the Velcro® pads on the bottom of the Tailgate TechLiner®. **Keep the Velcro® clean and do not remove the backing yet.**

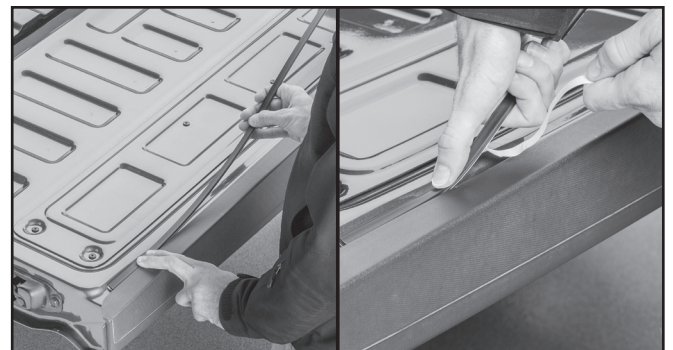

3 Using the supplied torx bit with a 1/4" socket remove the factory bolts from the tailgate. Place the factory bolts aside to be re-installed in step 6.

4 Unroll the extrusion and discard the plastic tube, be careful not to kink the extrusion. Place the extrusion against the edge with the opening facing the front of the vehicle and centered on the tailgate. Slowly remove the adhesive backing, pressing firmly as you go.


[View Easy Installation Video](#)
WeatherTech.com/install

 Proudly Designed,
Engineered, and
Manufactured
in the USA.


Questions? Call customer service at 630 769 1500
Monday - Friday: 9 a.m. to 5 p.m. Central Time



5 Lay the Tailgate TechLiner® with the Velcro® pads facing down, make sure the holes in the liner line up with the bolt holes.

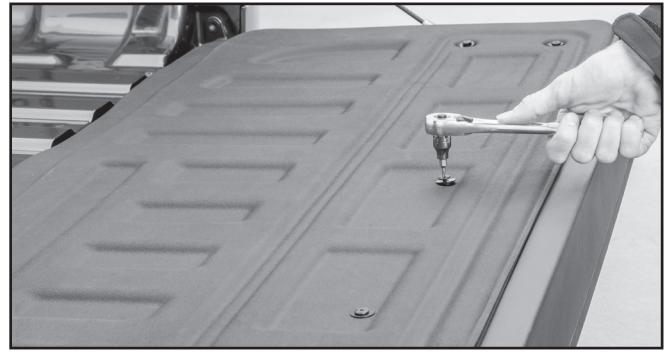

6 With the Tailgate TechLiner® in place, re-install the factory bolts over the Tailgate TechLiner® using the supplied plastic washers with the large diameter of the washer against the underside of the fastener. **Do not over tighten.**

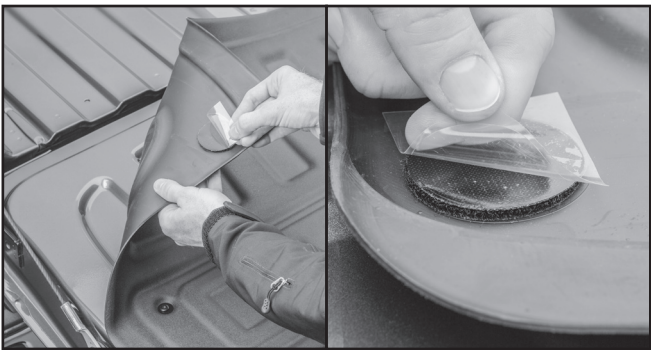

7 Without shifting the position of the Tailgate TechLiner®, bend the Tailgate TechLiner® backward to locate the first Velcro® disc. Remove the backing from the Velcro®. Fold the Tailgate TechLiner® back into place, and press down firmly on the location of the Velcro® disc. Continue the process in a clockwise direction.



8 Starting at one end, begin tucking the edge of the Tailgate TechLiner® into the plastic extrusion that you previously installed. Work your way down the entire length of the tailgate.

Tailgate Parts Kit 5

88TG07

Contains:

- (1) T-15 Torx insert bit
- (12) plastic shoulder washers

Congratulations!

Your new WeatherTech® Tailgate TechLiner® has been installed!

Your WeatherTech® Tailgate TechLiner® carries a three year warranty from the date of purchase, against defects in materials and workmanship when installed correctly.

[View Easy Installation Video](#)

WeatherTech.com/install

**Questions? Call customer service at 630 769 1500
Monday - Friday: 9 a.m. to 5 p.m. Central Time**



67TG05
© 2014 by MacNeil IP LLC

