WeatherTech®

Sunroof Wind Deflector Installation Instructions

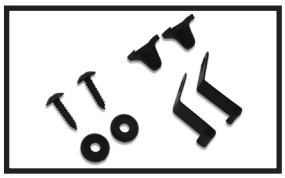

Hardware Included

2 Screws
2 MagiClip™ cones and clips
1 Sunroof Deflector with AirCushion™ Gasket

Tools Needed

You will need a #2 Phillips screw driver to complete this installation.

Place the deflector on the vehicle's roof positioned slightly in front of the sunroof opening, making sure it is straight and evenly spaced on each side of the opening.

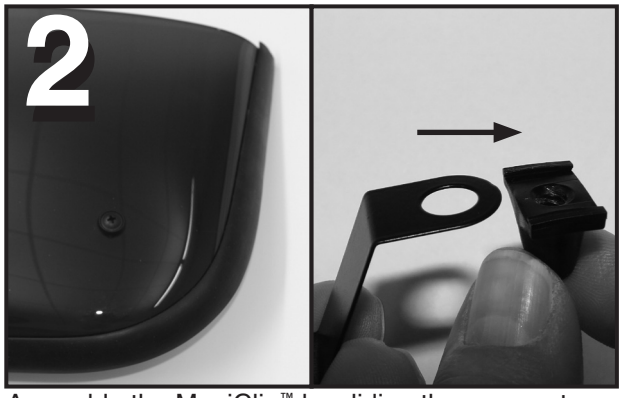

Assemble the MagiClip™ by sliding the cone nuts onto the flat end of the clips as shown.

Hook the clip onto the metal lip of the sunroof opening in a position corresponding to the hole in the deflector. It may be necessary to adjust the deflector's position slightly.

Press upward on the MagiClip™ while turning the screw clockwise with some downward pressure. DO NOT TIGHTEN the screw fully at this time. Repeat steps 3 & 4 on the right side of the deflector.

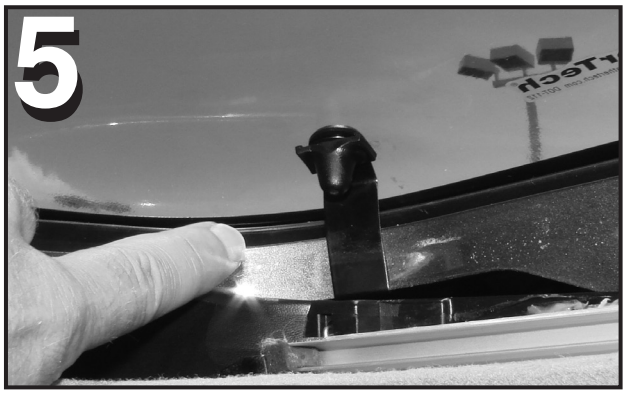

Ensure that the deflector is positioned straight, and adjust it until in the proper orientation. Tighten both screws until the MagiClip™ is flush with the bottom of the deflector as shown. Do not over tighten.

Congratulations!

Your new WeatherTech®
Sunroof Wind Deflector has been installed!

1 MacNeil Ct. Bolingbrook, IL 60440 • 630-769-1500 • fax 630-763-0300 • WeatherTech.com

MacNeil AUTOMOTIVE PRODUCTS LIMITED

SRDWT-INST

©2012 by MacNeil IP LLC